

Interval	Text	ATA Code	Description
5000	CHANGE ENGINE OIL & OIL FILTER	1E001006	LOF (LUBE, OIL, & FILTER)
5000	CHECK CV BOOTS FOR CRACKS & TEARS		
5000	CK TIRE PRESSURE AND CONDITION		
10000	CHANGE ENGINE OIL & OIL FILTER	1E001006	LOF (LUBE, OIL, & FILTER)
10000	ROTATE TIRES	17001A04	TIRE ROTATION
10000	CHECK CV BOOTS FOR CRACKS & TEARS		
10000	LUBE CHASSIS		
10000	CK TIRE PRESSURE AND CONDITION		
15000	CHANGE ENGINE OIL & OIL FILTER	1E001006	LOF (LUBE, OIL, & FILTER)
15000	CHECK AIR- FILTER		
15000	CHECK CV BOOTS FOR CRACKS & TEARS		
15000	CHECK ALL BRAKES		
15000	CK TIRE PRESSURE AND CONDITION		
20000	CHANGE ENGINE OIL & OIL FILTER	1E001006	LOF (LUBE, OIL, & FILTER)
20000	ROTATE TIRES	17001A04	TIRE ROTATION
20000	CHECK CV BOOTS FOR CRACKS & TEARS		
20000	LUBE CHASSIS		
20000	CK TIRE PRESSURE AND CONDITION		
25000	CHANGE ENGINE OIL & OIL FILTER	1E001006	LOF (LUBE, OIL, & FILTER)
25000	CHECK CV BOOTS FOR CRACKS & TEARS		
25000	CK TIRE PRESSURE AND CONDITION		
30000	CHANGE ENGINE OIL & OIL FILTER	1E001006	LOF (LUBE, OIL, & FILTER)
30000	ROTATE TIRES	17001A04	TIRE ROTATION
30000	CHECK AIR- FILTER		
30000	INSPECT & REPLACE AIR FILTER AS NEEDED	41001005	AIR FILTER - PRIMARY ENGINE
30000	CHECK CV BOOTS FOR CRACKS & TEARS		
30000	LUBE CHASSIS		
30000	CHECK ALL BRAKES		
30000	CK TIRE PRESSURE AND CONDITION		
35000	CHANGE ENGINE OIL & OIL FILTER	1E001006	LOF (LUBE, OIL, & FILTER)
35000	CHECK CV BOOTS FOR CRACKS & TEARS		
35000	CK TIRE PRESSURE AND CONDITION		
40000	CHANGE ENGINE OIL & OIL FILTER	1E001006	LOF (LUBE, OIL, & FILTER)
40000	ROTATE TIRES	17001A04	TIRE ROTATION

40000	CHANGE TRANSMISSION FLUID & FILTER		
40000	CHECK CV BOOTS FOR CRACKS & TEARS		
40000	LUBE CHASSIS		
40000	CK TIRE PRESSURE AND CONDITION		
45000	CHANGE ENGINE OIL & OIL FILTER	1E001006	LOF (LUBE, OIL, & FILTER)
45000	CHECK AIR- FILTER		
45000	CHECK CV BOOTS FOR CRACKS & TEARS		
45000	CHECK ALL BRAKES		
45000	CK TIRE PRESSURE AND CONDITION		
50000	CHANGE ENGINE OIL & OIL FILTER	1E001006	LOF (LUBE, OIL, & FILTER)
50000	ROTATE TIRES	17001A04	TIRE ROTATION
50000	CHECK CV BOOTS FOR CRACKS & TEARS		
50000	LUBE CHASSIS		
50000	CK TIRE PRESSURE AND CONDITION		
55000	CHANGE ENGINE OIL & OIL FILTER	1E001006	LOF (LUBE, OIL, & FILTER)
55000	CHECK CV BOOTS FOR CRACKS & TEARS		
55000	CK TIRE PRESSURE AND CONDITION		
60000	CHANGE ENGINE OIL & OIL FILTER	1E001006	LOF (LUBE, OIL, & FILTER)
60000	ROTATE TIRES	17001A04	TIRE ROTATION
60000	CHECK AIR- FILTER		
60000	INSPECT & REPLACE AIR FILTER AS NEEDED	41001005	AIR FILTER - PRIMARY ENGINE
60000	CHECK CV BOOTS FOR CRACKS & TEARS		
60000	SERVICE DIFFERENTIAL (4X4)		
60000	LUBE CHASSIS		
60000	CHECK ALL BRAKES		
60000	CK TIRE PRESSURE AND CONDITION		
65000	CHANGE ENGINE OIL & OIL FILTER	1E001006	LOF (LUBE, OIL, & FILTER)
65000	CHECK CV BOOTS FOR CRACKS & TEARS		
65000	CK TIRE PRESSURE AND CONDITION		
70000	CHANGE ENGINE OIL & OIL FILTER	1E001006	LOF (LUBE, OIL, & FILTER)
70000	ROTATE TIRES	17001A04	TIRE ROTATION
70000	REPLACE SPARK PLUGS		
70000	CHECK CV BOOTS FOR CRACKS & TEARS		
70000	LUBE CHASSIS		
70000	CK TIRE PRESSURE AND CONDITION		

75000	CHANGE ENGINE OIL & OIL FILTER	1E001006	LOF (LUBE, OIL, & FILTER)
75000	CHECK AIR- FILTER		
75000	CHECK CV BOOTS FOR CRACKS & TEARS		
75000	CHECK ALL BRAKES		
75000	CK TIRE PRESSURE AND CONDITION		
80000	CHANGE ENGINE OIL & OIL FILTER	1E001006	LOF (LUBE, OIL, & FILTER)
80000	ROTATE TIRES	17001A04	TIRE ROTATION
80000	CHECK CV BOOTS FOR CRACKS & TEARS		
80000	LUBE CHASSIS		
80000	CK TIRE PRESSURE AND CONDITION		
85000	CHANGE ENGINE OIL & OIL FILTER	1E001006	LOF (LUBE, OIL, & FILTER)
85000	CHECK CV BOOTS FOR CRACKS & TEARS		
85000	CK TIRE PRESSURE AND CONDITION		
90000	CHANGE ENGINE OIL & OIL FILTER	1E001006	LOF (LUBE, OIL, & FILTER)
90000	ROTATE TIRES	17001A04	TIRE ROTATION
90000	CHECK AIR- FILTER		
90000	INSPECT & REPLACE AIR FILTER AS NEEDED	41001005	AIR FILTER - PRIMARY ENGINE
90000	CHECK CV BOOTS FOR CRACKS & TEARS		
90000	LUBE CHASSIS		
90000	CHECK ALL BRAKES		
90000	CK TIRE PRESSURE AND CONDITION		
95000	CHANGE ENGINE OIL & OIL FILTER	1E001006	LOF (LUBE, OIL, & FILTER)
95000	CHECK CV BOOTS FOR CRACKS & TEARS		
95000	CK TIRE PRESSURE AND CONDITION		
100000	CHANGE ENGINE OIL & OIL FILTER	1E001006	LOF (LUBE, OIL, & FILTER)
100000	ROTATE TIRES	17001A04	TIRE ROTATION
100000	CHECK CV BOOTS FOR CRACKS & TEARS		
100000	LUBE CHASSIS		
100000	CK TIRE PRESSURE AND CONDITION		
105000	CHANGE ENGINE OIL & OIL FILTER	1E001006	LOF (LUBE, OIL, & FILTER)
105000	CHECK AIR- FILTER		
105000	CHECK CV BOOTS FOR CRACKS & TEARS		
105000	CHECK ALL BRAKES		
105000	CK TIRE PRESSURE AND CONDITION		
110000	CHANGE ENGINE OIL & OIL FILTER	1E001006	LOF (LUBE, OIL, & FILTER)

110000	ROTATE TIRES	17001A04	TIRE ROTATION
110000	CHECK CV BOOTS FOR CRACKS & TEARS		
110000	LUBE CHASSIS		
110000	CK TIRE PRESSURE AND CONDITION		
115000	CHANGE ENGINE OIL & OIL FILTER	1E001006	LOF (LUBE, OIL, & FILTER)
115000	CHECK CV BOOTS FOR CRACKS & TEARS		
115000	CK TIRE PRESSURE AND CONDITION		
120000	CHANGE ENGINE OIL & OIL FILTER	1E001006	LOF (LUBE, OIL, & FILTER)
120000	ROTATE TIRES	17001A04	TIRE ROTATION
120000	CHECK AIR- FILTER		
120000	INSPECT & REPLACE AIR FILTER AS NEEDED	41001005	AIR FILTER - PRIMARY ENGINE
120000	CHECK CV BOOTS FOR CRACKS & TEARS		
120000	LUBE CHASSIS		
120000	CHECK ALL BRAKES		
120000	CK TIRE PRESSURE AND CONDITION		
125000	CHANGE ENGINE OIL & OIL FILTER	1E001006	LOF (LUBE, OIL, & FILTER)
125000	CHECK CV BOOTS FOR CRACKS & TEARS		
125000	CK TIRE PRESSURE AND CONDITION		
130000	CHANGE ENGINE OIL & OIL FILTER	1E001006	LOF (LUBE, OIL, & FILTER)
130000	ROTATE TIRES	17001A04	TIRE ROTATION
130000	CHECK CV BOOTS FOR CRACKS & TEARS		
130000	LUBE CHASSIS		
130000	CK TIRE PRESSURE AND CONDITION		
135000	CHANGE ENGINE OIL & OIL FILTER	1E001006	LOF (LUBE, OIL, & FILTER)
135000	CHECK AIR- FILTER		
135000	CHECK CV BOOTS FOR CRACKS & TEARS		
135000	CHECK ALL BRAKES		
135000	CK TIRE PRESSURE AND CONDITION		
140000	CHANGE ENGINE OIL & OIL FILTER	1E001006	LOF (LUBE, OIL, & FILTER)
140000	ROTATE TIRES	17001A04	TIRE ROTATION
140000	CHECK CV BOOTS FOR CRACKS & TEARS		
140000	LUBE CHASSIS		
140000	CK TIRE PRESSURE AND CONDITION		
145000	CHANGE ENGINE OIL & OIL FILTER	1E001006	LOF (LUBE, OIL, & FILTER)
145000	CHECK CV BOOTS FOR CRACKS & TEARS		

145000	CK TIRE PRESSURE AND CONDITION		
150000	CHANGE ENGINE OIL & OIL FILTER	1E001006	LOF (LUBE, OIL, & FILTER)
150000	ROTATE TIRES	17001A04	TIRE ROTATION
150000	CHECK AIR- FILTER		
150000	INSPECT & REPLACE AIR FILTER AS NEEDED	41001005	AIR FILTER - PRIMARY ENGINE
150000	CHECK CV BOOTS FOR CRACKS & TEARS		
150000	LUBE CHASSIS		
150000	CHECK ALL BRAKES		
150000	CK TIRE PRESSURE AND CONDITION		